

Popcorn Popper Instructions



Popping

- (1) Turn kettle heat, kettle motor, and lights on. Make sure the agitator is spinning.
- (2) For first batch, let kettle heat for about 5 minutes.
DO NOT TOUCH KETTLE WHILE IT IS HOT!
- (3) Add oil and corn to kettle and close the lid. Make sure to leave one of the poppers doors open for venting.
- (4) When popping slows, dump the contents of the kettle. Make sure the agitator engages when flipping the kettle back up.
- (5) Sift corn over the bottom grate to remove unpopped kernels.
- (6) On final batch, when the corn starts to fall out, turn the kettle heat off, not the motor. Turn the motor off after dumping the kettle.
- (7) Keep heat and motor off when not popping.

Cleaning

- (1) Allow kettle to cool completely.
- (2) Make sure all switches are turned to off and unplug machine.
- (3) Remove any remaining corn from the inside and the collection tray.
- (4) With a cloth(s), wipe out the inside and outside of the kettle, as well as the inside windows, grate, and collection tray.
NEVER SUBMERGE THE KETTLE IN WATER!