


# BUNN FROZEN DRINK MACHINE



## OPERATING

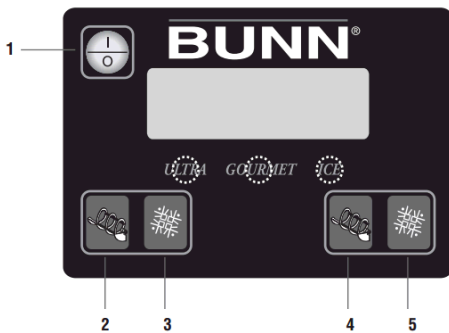

This switch is the ON/OFF toggle switch which powers up the dispenser and the LCD display.



These are used to turn the left and right side auger motors to AUGER ON or AUGER OFF.



This is used to turn the left side ice control to OFF, ICE or CHILL. (In ICE or CHILL mode, Auger will turn ON).

1. Lift the lid and pour pre-mixed product into the hopper.
2. Press the ON/OFF switch to power on the machine.
3. Press the AUGER ON/AUGER OFF switch for the side you are using.
4. For Frozen Drinks: Press the OFF/ICE/CHILL switch for the side you are using and select ICE.  
For Chilled Drinks: Press the OFF/ICE/CHILL switch for the side you are using and select CHILL.
5. Check the drip tray periodically and empty as needed.

## TIPS

- All products must be thoroughly mixed before pouring into the hopper.
- For best results with frozen drinks, use only products with an apparent brix of 12 or higher.
- Keep pre-mixed products refrigerated to reduce cooling/freezing time.
- If a hopper needs refilled, it is best to add small amounts of the pre-mixed product to the already chilled/frozen drink in the machine. This will reduce the cooling/freezing time.
- Keep the product level in the hoppers higher than the auger. Air will become entrapped in the mixture and result in a clouded foamy consistency.
- You may notice frost, ice, or sweating on the hoppers. This is normal.

## CLEANING

1. Empty any remaining product out of the hoppers.
2. Press the OFF/ICE/CHILL switch and select OFF.
3. Fill hoppers with hot water and let run for a few minutes.
4. Empty water out of the hoppers.
5. Empty and rinse drip tray.