

Maxi Fogger



Precautions

1. To avoid the potential risk of fire, electrical shock, or injury:
 - a. Place unit on a flat, firm, level surface.
 - b. Do not overfill the liquid tank.
 - c. Disconnect from power before cleaning.
2. **FOG MAY TRIGGER SOME FIRE/SMOKE ALARMS. CONSULT WITH YOUR VENUE OR FIRE DEPARTMENT!**
3. Keep away from children and pets.
4. Keep away from flames, and flammable or explosive substances.
5. Do not obstruct the nozzle or aim at people or animals. Keep a minimum of 2 feet clearance from nozzle.
6. Do not use the machine if there is a leak, or the liquid in the tank has overflowed.
7. Make sure there is proper ventilation to the area the fogger will be used in.

Operating

1. Place unit on a flat, firm, level surface.
2. Carefully pour the fogging fluid into the tank.
Do not overfill!
Use water based fogging liquid only!
3. Plug the machine in. If the machine is cold it may take up to 10 minutes to warm up.
4. Once machine is warmed and ready, the red light button will illuminate.
5. Press the red light button to release your desired amount of fog.